

# BaBylissPRO®

©2024 BaBylissPro

Distributed by:

**Dateline Imports P/L**  
**Professional Products Division**  
Banksmeadow, NSW 2019  
Australia

Ph: 61 2 9666 3611

[www.babylisspro.com.au](http://www.babylisspro.com.au)

**Dateline Imports NZ Ltd**  
66 Apollo Drive  
Albany, Auckland  
NZ 0632

Ph: 64 9 415 5415

[www.babylisspro.co.nz](http://www.babylisspro.co.nz)



## **Professional 16PC Multi-Size Ceramic Technology Rollers Model B16SHRA**

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using.



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

### **DANGER – To reduce the risk of electric shock:**

1. **Always unplug this appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or any other liquids.
5. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other containing water.



### **WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:**

1. **An appliance should never be left unattended when plugged in.**
2. **Do not pull, twist or wrap line cord around appliance**
3. This appliance should not be used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by BaBylissPRO.
5. **Do not use the appliance if the cord is damaged. In the event of damage discontinue use immediately. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.**
6. Keep the cord away from heated surfaces.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air

openings free of lint, hair, and other obstructions.

8. Never use while sleeping.
9. Never drop or insert any object into any opening or hole.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use an extension cord with this appliance.
12. Do not touch heat sink that holds rollers, as it will be hot.

### **IMPORTANT!**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## HOW TO OPERATE YOUR HOT ROLLERS:

1. Place hot rollers on a firm, flat surface. With the lid on, plug cord into outlet. This appliance is designed to operate at 220-240V ~ (50-60Hz).
2. Once plugged in, turn the unit on by switching it to the ON position. The rollers will heat up quickly.
3. Allow rollers to heat with lid on, as this will provide the fastest, most efficient heat-up. Once the rollers are hot — the Ready Indicator light on the front of the stand will turn green and the Heat Sensor dot on one of the rollers will turn white — you can begin setting your hair. Allow rollers to heat longer for tighter curls. Never leave your hot rollers on and unattended. Always unplug the hot rollers when not in use. Allow the hot rollers to cool down after use, and store in a safe place.
4. Hair should be clean and dry or slightly damp – never wet when setting. For further instruction, please refer to HOW TO CURL YOUR HAIR.

## HOW TO CURL YOUR HAIR

1. Place ends of hair on roller and wind toward the scalp. Roll hair up firmly, and secure pin, crossing over roller. Do not place pin in roller slit.
2. The firmness of the curl is regulated by the roller temperature and the length of time the roller is left in your hair.
3. For tight, firm curls, leave rollers in the hair for at least 10 minutes before removing. For soft, wavy curls, the rollers should be removed from the hair after a shorter period of time.
4. Removing rollers: Hold roller in one hand while removing pin with the other. Gently drop roller (do not pull) and let curl bounce back after roller has been completely removed. Repeat with remaining rollers.

Let hair cool for one minute for firmly set curls and then style your hair into a look that lasts for hours.

**Important:** After using the hot rollers several times, you will find the best timing for the texture of your hair and for the result you desire.

## CERAMIC TECHNOLOGY!

These innovative Standing Hot Rollers feature ceramic technology to ensure even, consistent, and gentle far-infrared heat that creates long-lasting and voluminous curls.

## USER MAINTENANCE

This product represents the highest standards of workmanship and engineering research. Your hot roller set is designed for professional or household use and is virtually maintenance free.

If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Clean the unit and the heat sink with a cloth. Occasionally, you may want to clean your rollers. Use a damp cloth and mild detergent or soap. If any abnormal condition occurs, unplug the hot roller set, allow it to cool, and return it to an authorized service representative for repair.

## STORAGE

Allow hot rollers to cool. Handle cord carefully for longer life; avoid jerking or straining at plug connections. Place hot rollers out of reach of children in a safe, dry location.

## CAUTION

NEVER allow the power-supply cord to be pulled or twisted. Never wrap the cord around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.



## Ceramic Technology Rollers

Model B16SHRA



Heat Sensor dot will turn white when rollers are ready to use

16 velvet-flocked hot rollers that help prevent tension and snaring. 3 assorted sizes to create every style for every hair length:

- 44mm = 4pcs
- 38mm = 6pcs
- 32mm = 6pcs

ON/OFF switch

Ready Indicator light will turn green when rollers are ready to use

Convenient drawer to store 16 crease-free pins that hold rollers firmly in place

Unique upright design and convenient cord wrap for the 1.5m (5 ft.) power cord to keep your counter or salon station organized



Easy-to-remove silicone cover acts as a heat mat for placing rollers, pins, or other styling tools

## TWO YEAR WARRANTY

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. We recommend attaching a copy of your purchase receipt to this instruction book and storing in a safe place.

To make a warranty claim you can return the defective product back to the place it was purchased where it will be replaced, exchanged or repaired (see point 12 in conditions).

Trade purchasers who have purchased from us directly should contact us directly with regard to warranty claims.

Please have the following details to hand:

1. Date of purchase
2. Details of where the product was purchased
3. Product Name/Model Number
4. Confirm you have your purchase receipt
5. Detail the problem with your product

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

For advice with regard to the warranty claim process please contact Customer Service:

### Dateline Imports P/L Professional Products Division

Banksmeadow, NSW 2019

Australia

Ph: 61 2 9666 3611

[www.babylisspro.com.au](http://www.babylisspro.com.au)

### Dateline Imports NZ Ltd

66 Apollo Drive

Albany, Auckland

NZ 0632

Ph: 64 9 415 5415

[www.babylisspro.co.nz](http://www.babylisspro.co.nz)

## WARRANTY AGAINST DEFECTS

### A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### B. BabylissPRO EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 24 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Dateline warrants to the original purchaser ("Purchaser") of the BabylissPRO product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Dateline will a) replace the Product, or b) exchange defective part in the Product or c) repair the Product, as Dateline may choose in its discretion

(“Warranty”). In this Warranty “Dateline” means Dateline Imports P/L (ABN 60 000 557 282) of Banksmeadow, NSW 2019, Australia.

2. To honour the Warranty, Dateline must replace, or exchange parts in, or repair, the Product, as Dateline determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made there under, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

### C. CONDITIONS

1. The Product must be used in accordance with manufacturer’s instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, unforeseen natural disasters such as lightning etc., or nonobservance of manufacturer’s instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Dateline does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer’s instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so

by Dateline or where non approved replacement parts are used.

4. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Dateline. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Dateline Imports P/L or purchased second hand.
10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.

11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you’re certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you, exchange defective parts, repair the Product or refund at Dateline’s discretion. In this event, per the terms of this warranty you will need to present this portion of the warranty information and the purchase receipt as proof of purchase so please make sure you keep both these instructions and your receipt on hand for the duration of the warranty period.