

# **FX870BASE-GA, FX870BASE-RGA & FX870BASE-SA FX787BASE-GA, FX787BASE-RGA & FX787BASE-SA**

## **OPERATING INSTRUCTIONS**

- Remove charging base from package.
- Plug your existing adapter that came with your clipper/trimmer into the back of the charging base. Plug the other end of the adapter into the wall outlet. In case you lost your original adapter, we sell separate adapter (model number BFSCORDA).
- Once your adapter is plugged in, you can place your clipper/trimmer into the opening and begin charging. THE LED ON YOUR CLIPPER/TRIMMER UNIT SHOULD SLOW BLINK TO ENSURE YOUR CHARGING HAS BEGUN.
- IMPORTANT THAT YOU DON'T OVERCHARGE YOUR CLIPPER/TRIMMER AS THIS CAN DAMAGE THE BATTERY. IF YOU'RE NOT USING FOR AN EXTENDED PERIOD OF TIME, WE RECOMMEND REMOVING FROM THE CHARGING BASE.

**©2022 BabyLissPro**

Distributed by:

**Dateline Imports P/L**  
Professional Products Division  
Banksmeadow, NSW 2019  
Australia

Ph: 61 2 9666 3611

[www.babylisspro.com.au](http://www.babylisspro.com.au)

**Dateline Imports NZ Ltd**  
66 Apollo Drive  
Albany, Auckland  
NZ 0632

Ph: 64 9 415 5415

[www.babylisspro.co.nz](http://www.babylisspro.co.nz)