

BaBylissPRO®

©2020 BaBylissPro

Distributed by:

Dateline Imports P/L
Professional Products Division
Banksmeadow, NSW 2019
Australia

Ph: 61 2 9666 3611
www.babylisspro.com.au

Dateline Imports NZ Ltd
66 Apollo Drive
Albany, Auckland
NZ 0632

Ph: 64 9 415 5415
www.babylisspro.co.nz



Professional 30PC Multi-Size Hot Roller Model BAB3031DA

For your safety and continued enjoyment of this product,
always read the instruction book carefully before use.


IMPORTANT SAFETY INSTRUCTIONS

Please read through these instructions carefully and retain for future reference.

WARNING

- When using electrical appliances, especially when children are present, basic safety instructions should always be followed.
- Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. 
- Do not immerse the appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

IMPORTANT!

- Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.

- Use this appliance only for its intended use and as described in this instruction booklet.
- Do not use any other attachments other than those supplied with this product.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- Never drop the appliance or insert any object into an opening.
- Never use while sleeping.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use if the supply cord is damaged. In the event of damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

GETTING TO KNOW YOUR NEW STYLING TOOL


Create full, textured, loose or wavy curls with this 30pc multi-size hot roller set.

Featuring ionic conditioning & tourmaline-ceramic, this hot roller set reduces frizz & flyaways for an enhanced smooth, silky shine.

With 2 professional temperature settings for variable style control and a range of multi-sized rollers in 4 different sizes, this hot roller set is suited to all hair types.

FEATURES

1. 30 multi-size rollers for full, textured, loose or wavy curls – 8 jumbo (30mm), 8 large (25mm), 8 medium (20mm) & 6 small (14mm)
2. Ionic conditioning & tourmaline-ceramic reduces frizz & flyaways for an enhanced smooth, silky shine
3. Ribbed rollers easily grip hair
4. Lightweight rollers
5. Cool touch roller ends
6. 2 professional temperature settings
7. Fast heat up
8. Folding arm for flat or vertical position
9. On/off switch with indicator light
10. 30 smart clips with storage pouch

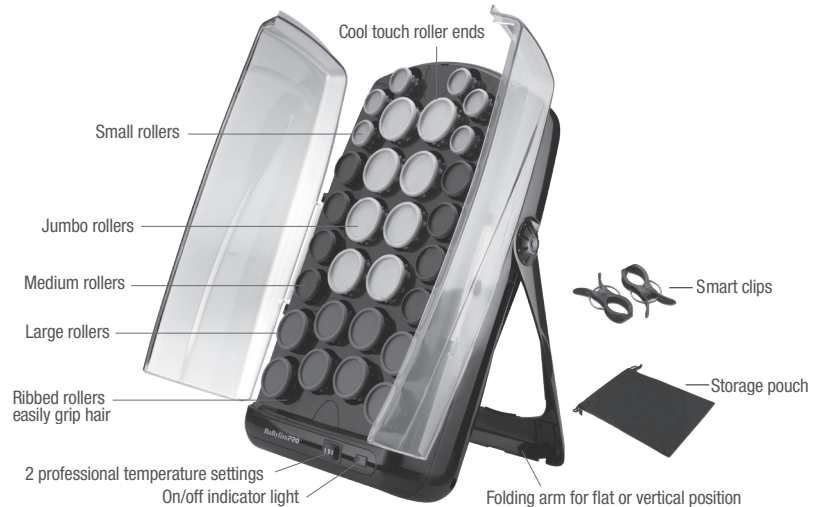

UNDERSTANDING THE CORRECT HEAT SETTING FOR YOUR HAIR TYPE

- There are 2 temperature settings to select from – “I” low and “II” high. Use the guide below to find the correct temperature setting for your hair type

HAIR TYPE	Fine, delicate fragile hair Colour treated or highlighted hair	Average, normal hair Thick, hard to style hair
RECOMMENDED TEMPERATURE SETTING	I	II

and desired style. We recommend you always start with a lower temperature and increase if required.

IMPORTANT!

The firmness of the curl is determined by several factors – heat up time, best roller selection and the length of time the roller is left in the hair.

HOW TO USE YOUR NEW STYLING TOOL

- A plastic cover has been placed over the plug to protect it during transportation. Remove the plastic cover from the plug before use.
- Place the hot roller set on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet.
- Once plugged in, select the required temperature setting by switching the power switch to the “I” or “II” position. The red indicator light will then illuminate to indicate that the rollers are heating up.

IMPORTANT!

When rollers are heating up, always have the lids closed, as this will provide the fastest, most efficient heat up. When removing rollers to place in the hair, the lids must always be open (both sides of the lid). Leaving the lids closed when rollers are missing will cause the lids to melt. Take extra caution when heating up the appliance when rollers are missing.

- Allow the rollers to heat up for approximately 5-10 minutes after switching the unit on. At this time the rollers have reached the optimum temperature and you can begin styling your hair.

CAUTION: When using rollers, your hair should be clean, dry and free from knots and tangles. Hair can be slightly damp, but never wet.

WHICH ROLLER SIZE TO USE

ROLLER SIZE	Jumbo - 30mm	Large – 25mm	Medium – 20m	Small – 14mm
RESULT / DESIRED STYLE	Use on medium to long hair to create voluptuous curls with full, extra volume.	Use on medium to long hair to create a looser curl, yet bouncy and full.	Use on short to medium hair to create loose, wavy curls.	Use on short hair to create fullness and a tight curl. Tight curls can be used at the nape of the neck, and used to frame your face.

STYLING ADVICE

- Section dry or damp hair evenly and comb through before styling. Always ensure the hair free from knots and tangles.
- Select the desired roller size that suits the hairstyle you wish to create.
- Take one even section of hair at a time. Place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller.
- Roll hair up firmly and secure with a smart clip.
- For tight, firm curls use smaller rollers and leave in the hair for at least 10 minutes before removing. For soft, wavy curls use larger rollers and remove rollers from the hair after a shorter period of time.
- To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – DO NOT PULL, and let the curl bounce back after the roller is completely removed.
- Let hair cool for one minute for a firmly set curl, and then style your hair as desired.
- Spray with hair spray or a finishing product to set the curl in place for a longer lasting style.

IMPORTANT: After using the hair roller set several times, you will find the best roller selection, best timing for the texture of your hair and for the result you desire.

LOOKING AFTER YOUR NEW STYLING TOOL

- In order for your styling tool to retain its optimum performance, it is important to make sure there is no product build up on the rollers. When the rollers are completely cool and removed from the unit, use a damp cloth with mild detergent or soap and wipe

over the surface to wipe away any styling product.

- To clean the unit, ensure it is completely cool and unplugged from the power outlet. Clean the unit with a damp cloth and wipe away any product, etc that may build up on the unit.
- Keep the power cord away from the hot surfaces of the product at all times.
- Before storing away, always allow the unit and rollers to cool down.
- To prevent cord damage, do not wrap the cord around the unit – always store the cord loosely next to it.

TWO YEAR WARRANTY

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. We recommend attaching a copy of your purchase receipt to this instruction book and storing in a safe place.

To make a warranty claim you can return the defective product back to the place it was purchased where it will be replaced, exchanged or repaired (see point 12 in conditions).

Trade purchasers who have purchased from us directly should contact us directly with regard to warranty claims.

Please have the following details to hand:

1. Date of purchase
2. Details of where the product was purchased
3. Product Name/Model Number
4. Confirm you have your purchase receipt
5. Detail the problem with your product

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

For advice with regard to the warranty claim process please contact Customer Service:

Dateline Imports P/L Professional Products Division

Banksmeadow, NSW 2019

Australia

Ph: 61 2 9666 3611

www.babylisspro.com.au

Dateline Imports NZ Ltd

66 Apollo Drive

Albany, Auckland

NZ 0632

Ph: 64 9 415 5415

www.babylisspro.co.nz

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law (“ACL”) are provided in sections 51 to 59 inclusive of the ACL (“Statutory Guarantees”) and the remedies are provided in sections 259 to 266 inclusive of the ACL (“Statutory Remedies”).

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

B. BaByliss PRO EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty (“Warranty”) commences from the date of purchase and continues for a period of 24 months (“Warranty Period”) after which it expires. Subject to the conditions in Section C below, Dateline warrants to the original purchaser (“Purchaser”) of the BaByliss PRO product that is the subject of this warranty (“Product”) that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Dateline will a) replace the Product, or b) exchange defective part in the Product or c) repair the Product, as Dateline may choose in its discretion

("Warranty"). In this Warranty "Dateline" means Dateline Imports P/L (ABN 60 000 557 282) of Banksmeadow, NSW 2019, Australia.

2. To honour the Warranty, Dateline must replace, or exchange parts in, or repair, the Product, as Dateline determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made there under, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Dateline does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so

by Dateline or where non approved replacement parts are used.

4. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Dateline. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Dateline's authorized distributors or purchased second hand.
10. The Purchaser is responsible for all postage and freight charges and any

other expenses incidental to claiming against this Warranty.

11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you, exchange defective parts, repair the Product or refund at Dateline's discretion. In this event, per the terms of this warranty you will need to present this portion of the warranty information and the purchase receipt as proof of purchase so please make sure you keep both these instructions and your receipt on hand for the duration of the warranty period.